DMX Address



Status	Description
On	DMX data (start byte of 00) being received OK.
Flash Fast	Data being received, but not DMX data (start byte of 00)
Flash Slow	DMX data errors occurring.
Off	No DMY data boing received