

External Touchscreen



The external monitor connected to FLX S48, FLX and ZerOS Server, can be a touchscreen. The user interface displayed on the external monitor is designed to be used with a touchscreen.

To connect a touchscreen, use the DVI-D connector for video, and USB for the touch. You will then need to Calibrate your external touchscreen.

[Click here for Calibration information.](#)

Touchscreens that are plug and play with Windows 10 and do not require a driver, should work with ZerOS. Zero 88 however make no guarantee that all touchscreens will be compatible. [Contact Zero 88 for more information.](#)

For testing and demonstrations, the Zero 88 team use [liyama Prolite T2236MSC-B2](#). These touchscreens are pretty rugged, and are capacitive and so support multi-touch, which is ideal for use with the consoles.