




The Lock option allows you to lock the console with a pin number, so you can leave the console unattended safely. Locking the console will enable cues to still playback, and the faders can be used, however no programming or settings can be adjusted.


The default Pin is 0000. It's highly recommended that you change this pin.



To Lock the console, click Lock Console, and then enter the pin.

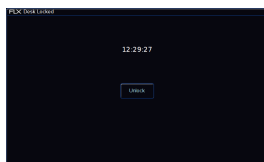


After entering the correct pin, the lock screen will be shown. FLX will display the current time, whereas FLX S will display the duration of time the console has been locked for.

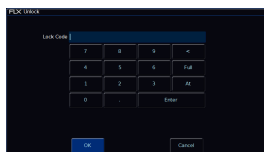

Pressing Unlock, will allow you to enter the lock code. You will then be taken back to the Z window.

On FLX, the shortcut to lock the console is Left + Right + Enter.

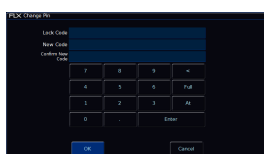

To change the pin, click Change Pin. You can then enter the current pin, and then enter and confirm the new pin. The pin must be four numbers long.

If you have forgotten your pin, please email support@zero88.com