

ZerOS includes the Zero 88 Fixture Library. This is a library which contains information for over 20,000 fixtures, including how they work, what parameters they have, what their default values are etc. This is accessed by tapping **[Setup]** -> **[Add Fixtures]** . In Add fixtures you tell ZerOS the Make and Model of the fixtures being used, and ZerOS finds those fixtures in the Zero 88 Fixture Library. [Click here to find out more about Add Fixtures.](#)

The Zero 88 fixture library is regularly updated. The latest version of the library can be downloaded from zero88.com/library.

To find the library version currently on your console, tap **[Z]** -> **[System Information]** .

If you are not running the latest version of the library, download it from the website, and copy the library file (.zldr format) to the root of a USB stick. Then plug the USB stick into your console, and then tap **[Setup]** -> **[Load]** and choose the new library file. [Click here to find out more.](#)

[If you can't find your fixture in the latest ZerOS Library, click here to find out how you can control your fixture.](#)