


Level 6 - Instructions and Specification

Level 6 is a 6 channel lighting controller with a Master fader and a "power on" LED. It may be wall mounted, using slots provided, or placed on an appropriate surface.

This desk can be used with any of the Zero 88 range of Betapacks or Rackmasters.

Power Supply to the Level 6 is + 20 volts @ 20mA;
Outputs are 0 to +10v only; maximum load is 25k ohms.

Pin connections:
(Front view of socket)

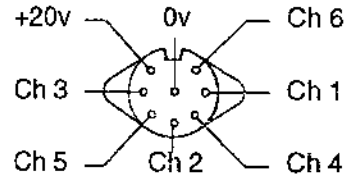


Level 6 may also be used for the remote control of both Sirius 24 and 48 submasters.

The Sirius must be fitted with a remote masters kit (Stk No 00-290-00)

THIS IS A LIGHTING CONTROL UNIT AND MUST NOT BE USED FOR ANY OTHER PURPOSE.

Zero 88 reserves the right to make changes to the equipment described in this handbook without prior notice.

© Zero 88 lighting Ltd. 1993. E&OE.

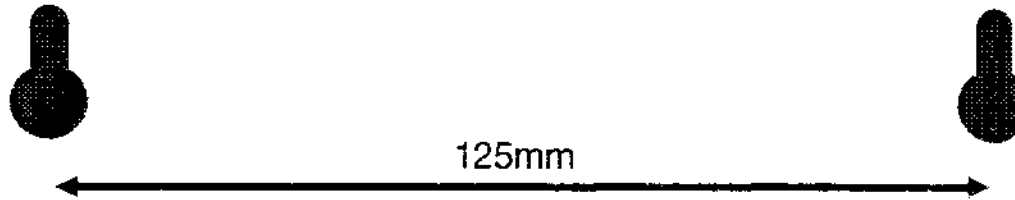

Wall Mounting Details

Two Keyhole slots are provided on the rear panel at 125mm centres.

(Use this drawing as a template for drilling the holes)